

MOTO-TOTE[®]

Motorcycle carriers

Instructions for: Light Kit (MTLK) for MTX Carriers

In the box:


- Light kit assembly with 4 ea mounting screws
- 6 ea Black nylon cable ties



Tools:

You will need these tools:

- Philips screwdriver
- Scissors or fingernail clippers

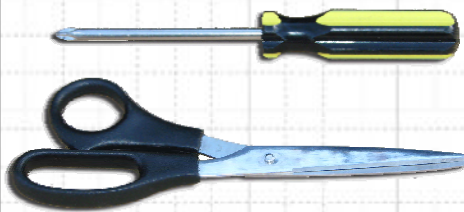

1 • **Check Left/Right** markings on the back side of each light to designate left/right placement.

• **Attach Lights** by putting the screws into the pre-punched holes on the MTX Platform Tube as shown here. Do not over-tighten or the light lens could crack.


• **Note** Avoid removing screws completely from the lights because they are connected to wires inside.



2 • **Run Cables** toward the center of the carrier, then forward under the square tube toward the vehicle.

• **Secure Cables** to the underside of the carrier with the nylon cable ties.

• **Clip Excess** from ends of cable ties with scissors or fingernail clippers

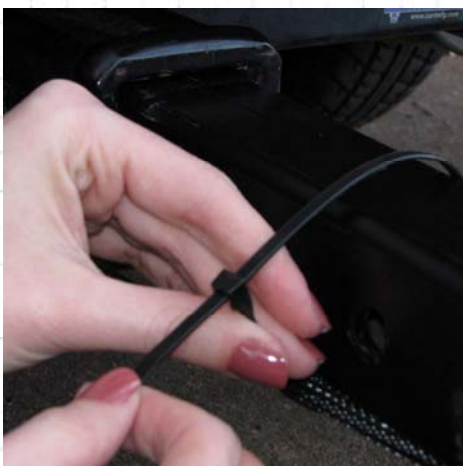

3 • **Plug-in and Check Operation** for brake, turn signal, and tail lights. Apply brakes and use turn signals with the headlights off. Repeat with the headlights on.



MOTO-TOTE is a registered trademark of D&D Design, Inc.
Patent #D393241

by *D&D Design, Inc.*

For more information, call (888) 333-4621 or visit MOTOTOTE.com